





ITM-US-51xx

Manual


1. Plug in the ITM-US-51xx, PC will detect a new USB device.
2. The following window will pop up, select "install from a list" and click "next"

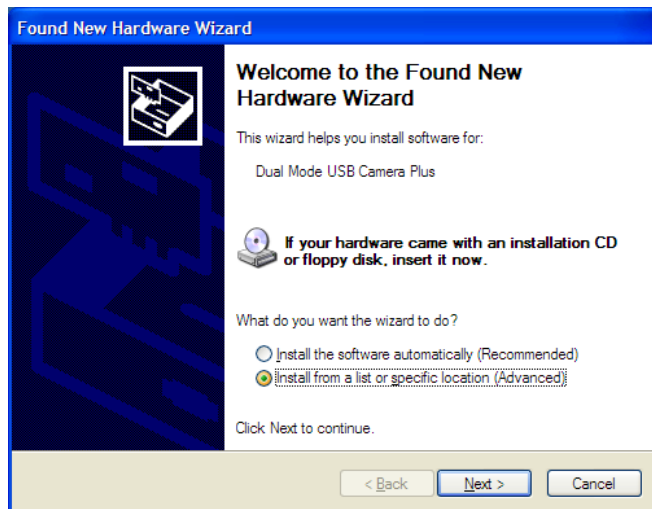


3. Use browse to locate the driver directory and click next

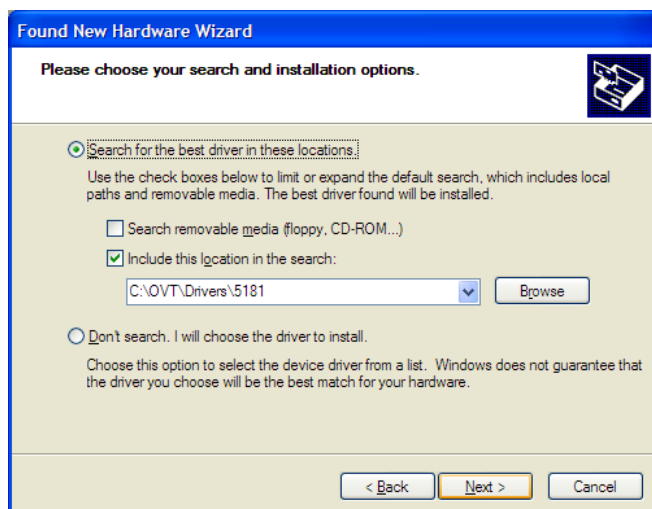

4. The PC will find the directory and copy the necessary files to desired directory.

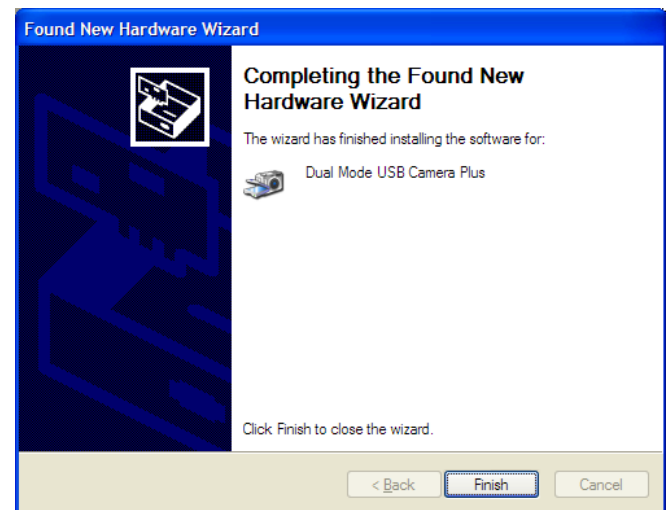

5. Installation completed and the LED on the ITM-US-51xx will light up.
6. Click the snap button on the module, a amcap window will pop up and you can view the picture accordingly.

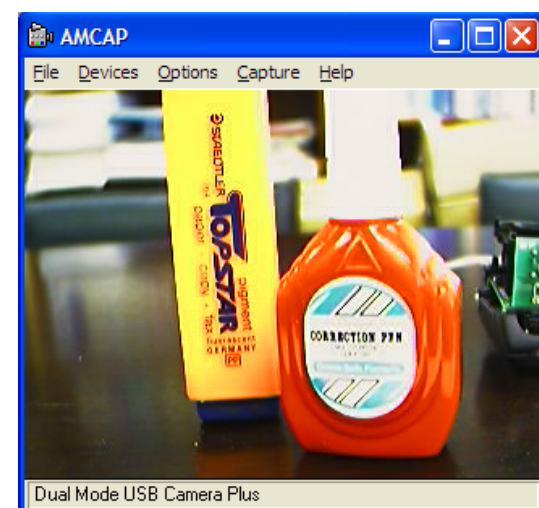

7. You can change the settings from Options and etc.

8. Close the amcap before plug off the camera from PC.